## CAMERA GETTING STARTED


## QUICK START GUIDE

**A** Place the battery into one of the pockets inside the provided carrying bag. Attach the power cable to the battery.

**B** Carefully plug the power cable into the camera – make sure the red orientation marks are aligned. The camera starts automatically when the power is connected. The LED on the side turns red.

**C** To turn off the camera, simply disconnect the power by carefully detaching the plug.

For more information, see the **NL Camera User Manual**.

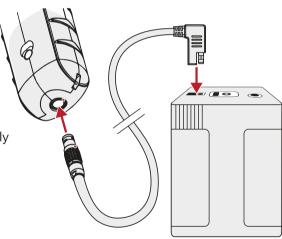

## **DEVICE SETUP WIZARD**

- **A** The device setup wizard is run when the device is started for the first time.
- **B** The wizard asks for WiFi settings (not supported in all regions), time settings, application mode (not applicable to all versions), and application mode related settings.
- **C** In the end, the instructions for registering the device for cloud use (not supported in all regions) are given. Registration can be performed once.

The cloud can be accessed at **view.nlacoustics.com**.

## VISIT THE NL ACOUSTICS SUPPORT PORTAL

Please visit **support.nlacoustics.com** for more information, such as how to use videos.